

OPTION 3003

CURRENT OR VOLTAGE OUTPUT

- Setup jumper for voltage or current output.
- Use Analog output terminal and Analog ground.
- Select voltage or current in user menu.
- Select at what display value you would like 0% out.
- Select at what display value you would like 100%
- Output accuracy 0.1% F.S.
- Current output, Max. .500 OHMS.
- Voltage output, Min.1000 OHMS.
- Non-Isolated, Ref: 3006
- Update 5Hz
- Resolution 12 Bits
- Output follows the Rate Value NOT Total.



P O Box 418, Honeydew 2040 South Africa
21 Precision Street, Kyaland Randburg.
Telephone: +27 11 462-1920
Telefax: +27 11 462-1958
email: info@instrotech.co.za
web: www.instrotech.co.za

