

LEO 2

Digital Manometer with Max./Min.-Display.

Accuracy: 0,1% FS typ.



Actual Value

Max. - / Min.-Value

SELECT

ENTER
Max. / Min.

7/16" UNF



LEO 2 has two operating keys. The left key (SELECT) serves to select the functions and the pressure units. The right key (ENTER) activates the selected function or pressure unit. The right key is also used to switch between the MAX.- and MIN.-value.

Turn-on: Pressing the SELECT key turns the instrument on. The instrument subsequently displays the software version (year/week), the full-scale pressure range, the actual pressure (top display) and the last measured MAX.-value (bottom display).

The instrument has the following functions:

RESET: Max./Min.-value are set to the actual pressure
OFF: Turns off the instrument
MANO: Releases the following functions:
ZERO SET: Sets a new Zero reference
ZERO rES: Sets the Zero to factory setting
CONT on: Deactivates the automatic turn-off function
CONT off: Activates the automatic turn-off function (the instrument turns off 15 minutes after the last key function)

followed by the unit selection: **bar, mbar/hPa, kPa, MPa, PSI**

Example: Setting a new pressure unit (mbar/hPa):

- > Turn on the instrument by shortly pressing the SELECT-key.
- > Wait for the instrument's measuring mode (approx. 3 seconds).
- > Press the SELECT-key 3 times: **MANO** appears.
- > Press ENTER: **ZERO SET** appears.
- > Press SELECT: **ZERO rES** appears.
- > Press SELECT: **CONT on** or **CONT off** appears.
- > Press SELECT: **BAR** appears.
- > Press SELECT: **mbar/hPa** appears.
- > Press ENTER: The new pressure unit is set. The instrument returns to the measuring mode.

Display of the minimum pressure value

When in the measuring mode (Display: Actual Pressure and Max.-value), you may display the Min.-value for 5 seconds by shortly pressing the ENTER-key.

Notes

- 1) The functions and units can also be called up by keeping the SELECT-key depressed. Releasing the key enables the displayed function or unit to be activated with the ENTER-key.
- 2) If the selected function or unit is not activated within 5 seconds with the ENTER-key, LEO 2 returns to the measuring mode without changing any settings.
- 3) Turning LEO 2 on and off does not influence any of the previous settings.
- 4) If the **CONT on** function is activated, it is indicated with a flashing sign on the display.
- 5) If a pressure can not be represented on the display, **OFL** (overflow) or **UFL** (underflow) appears on the display.
- 6) If the actual pressure goes beyond the measuring range, the last valid pressure value starts flashing on the display.

Installation

LEO 2 has 7/16" UNF male thread and is delivered complete with an O-ring seal swivel fitting which allows LEO 2 to be rotated through 360°.

Only minimal tightness is needed to seal up to 700 bar. Process pressure connection is G 1/4" male.



"Swivel"



Swivel Fitting

G1/4"

Battery Change / Battery Life

When the battery starts weakening, a low battery warning (BAT LOW) will appear in the upper left corner of the display.

Battery change: Open the battery compartment and change the battery (type CR 2430).

The battery life is 1400 hours in normal measuring mode.

Ranges / Calibration

The factory setting of the Zero for the ranges -1...3 bar or -1...30 bar is at 0 bar absolute. For sealed gauge pressure measurements, activate "ZERO SET" at ambient pressure.

Instruments with the ranges 0...300 bar or 0...700 bar are calibrated in a sealed gauge mode with 1 bar absolute pressure as a Zero reference.